



AKKO

3068

 
用户手册

User Manual

3068 Technical Specifications

Dimensions	312 x 102 x 40mm
Weight	Approximately 0.7KG
Country of Origin	China
Type	Mechanical Keyboard
Keycap	PBT Material
Interface	Type-C To USB
Multimedia Keys	YES
N-Key Rollover	YES
Custom Keys	YES (use Akko Marco V1.0)

3068 HotKeys

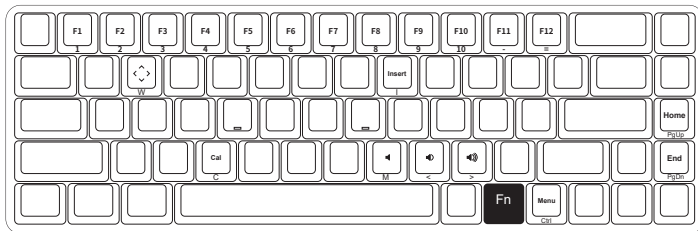


Fn+	1 - 0	=	F1 - F10
	-		F11
	=		F12
	PgUp		Home
	PgDn		End

Fn+	C	=	Calculator
	I		Insert
	M		Mute
	<		Decrease Volume
	>		Increase Volume

Fn+ W
Swap W A S D with ↑ ↓ ← →

Hold down FN and press right Ctrl
Revert Ctrl into Menu (APP) key

 3068 System Commands

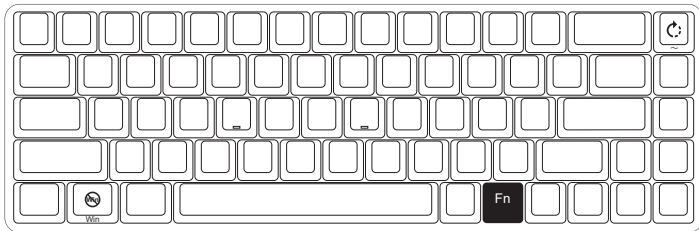

Lock Windows Key

 
Press **Fn** and left **Win** key

Restore Factory Settings

Hold down **Fn** and press ~ key

3068S Single-Color Backlight

*Backlight function is only available on the backlight version of 3068s.

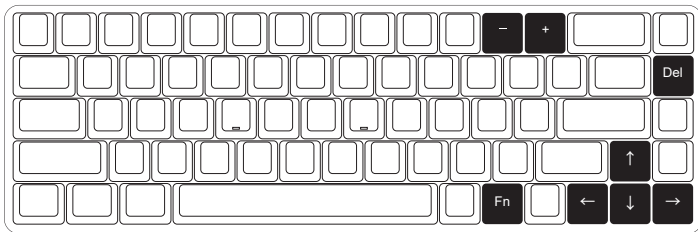

Fn+Del				
Lighting effects cycles among Steady / Breathe / One-key light up / One-key light off / Wave / Ripple / Raindrop				
	Fn+	“↑”	=	Bright
		“↓”		Dim
		“←”		Set animation direction to left
		“→”		Set animation direction to right
		“_”		Slower Animation
		“+”		Faster Animation
				The adjustments on the left is for generic lighting effects. Some lighting effects cannot be tweaked. For example, effects with constant light can only adjust brightness as they don't have animation speed and direction.

 
Akko Macro V1.0

Macro Setup Instruction 1

1. Akko Macro V1.0 is hardware-based and works without software-driven.
2. The following keys cannot be programmed: "Esc", "Fn" and "Left Win".
3. Press and hold Fn + Win for 3 seconds to switch to the Macro mode. When the keyboard is re-connected or the system is restarted, the Macro mode will be exited. You need to switch to the Macro mode again to use programmed keys.
4. Akko Macro V1.0 does not support simultaneous trigger, that is, pressing "AB" at the same time will trigger the two keys in the order of A followed by B.
5. Akko Macro V1.0 does not support customized interval time, that is, the trigger interval between key A and key B cannot be defined and will follow the system's default trigger time.

Akko Macro V1.0

Macro Setup Instruction 2

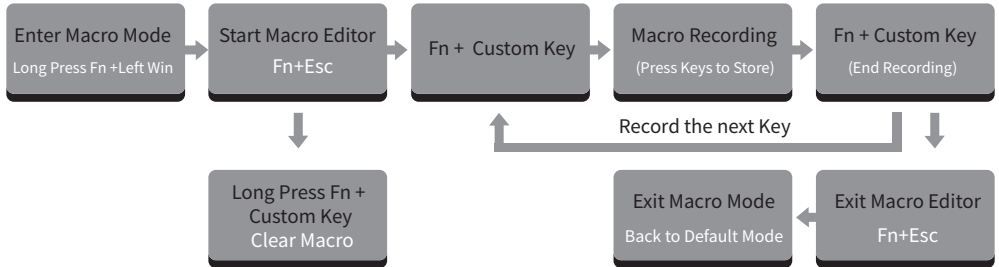

Akko Macro V1.0

Macro Setup Instruction 3

Macro Recording Example: Define “A” as “AKKOGEAR”

Step 1: Press Fn + left Win for 3 seconds to enter the Macro mode.

Step 2: Press Fn + ESC to launch Macro editor.

Step 3: Press Fn + A. This means we choose key “A” to record.

Step 4: Press A, K, K, O, G, E, A, R in order as replacement definition of “A”.

Step 5: Press Fn + A again to end the Macro recording of key “A”.

At this point, pressing “A” in notepad will display “AKKOGEAR”.

If you want to create a Macro for key “B”, press Fn + B to start the Macro recording.

Step 6: Press Fn + Esc to exit Macro editor.

Under the Macro mode, you can configure the keys and Macros you set.

Step 7: Press and hold Fn + Left Win for 3 seconds to exit the Macro mode and return to the default key definition.

Akko Warranty and Service Statement

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



www.akkogear.com



扫描关注官方微信



扫描关注官方微博



[instagram.com/akkogear](https://www.instagram.com/akkogear)



[facebook.com/akkogear](https://www.facebook.com/akkogear)